




NECESSARY TOOLS

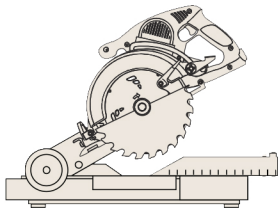


Chop Saw

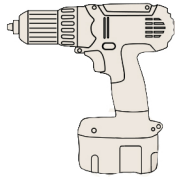


Screwdriver

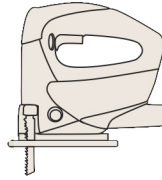

Electrofret

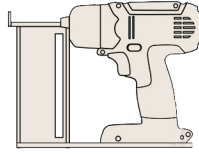

Finishing Nailer
ONLY

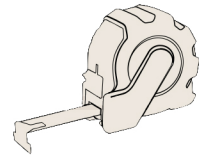


Tape
Measurement



Water
Sprayer



Work Gloves



Level




Safety Glasses




Liquid Nails




Doors and Windows
Construction Foam

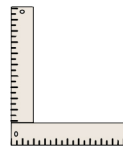

Square




Shims



Rubber
Hammer




Knife




Masking
Tape

DOOR PARTS




x2,5

JAMB




x5

CASING

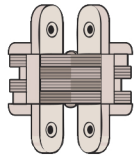

x2

HINGES




x3
SCREW 2 1/2"



x7
SCREW 1 5/8"




x6
SCREW 1 1/4"

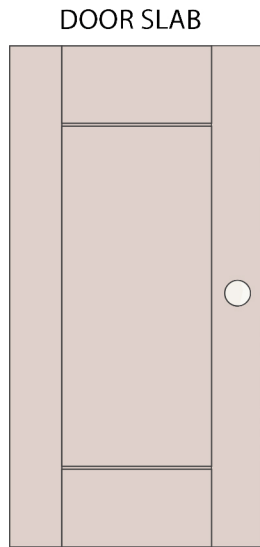

DOOR SLAB

x1



EXTENSION




x2,5

WARNING!


DO NOT USE STANDARD
NAILS AND HAMMER

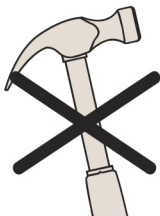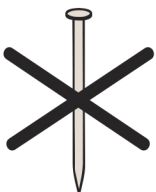


DO NOT STEP ON THE DOOR

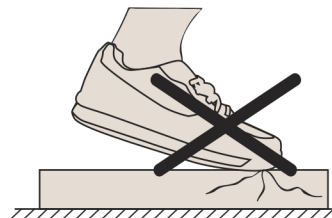


DO NOT LAY
DOWN ON EDGES

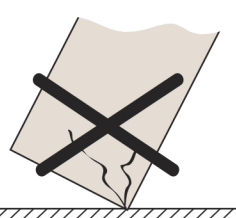


DO NOT LEAN
ON THE WALL

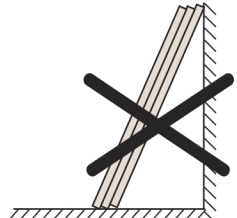


1

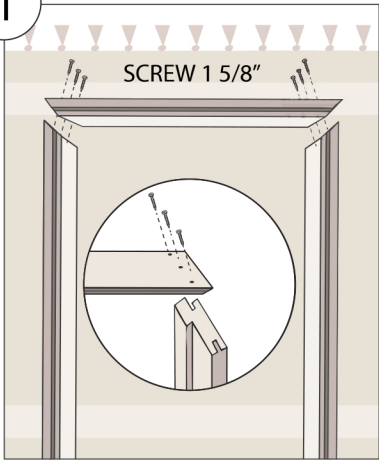


2

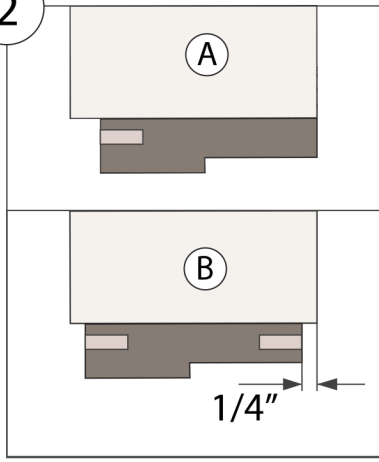


3

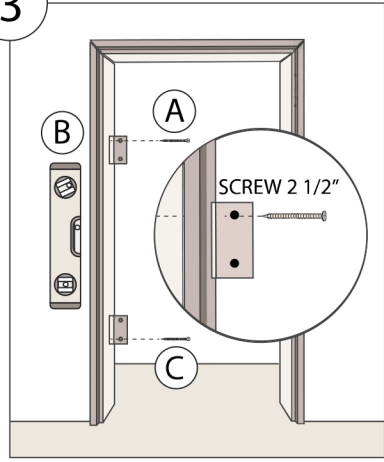


4

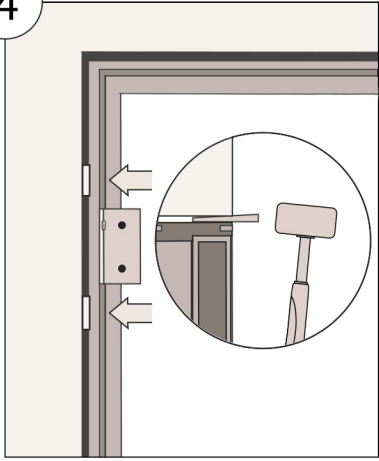


5

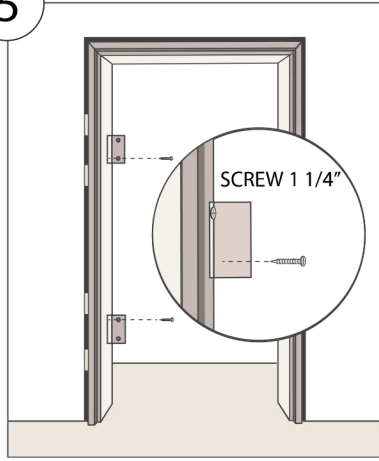


6

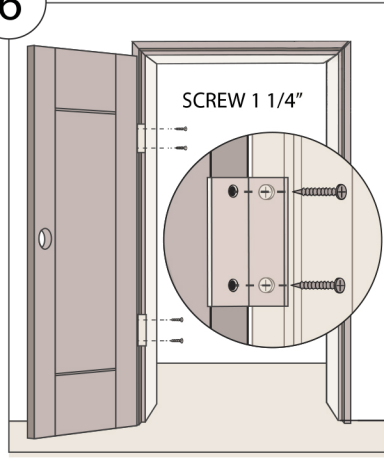

7

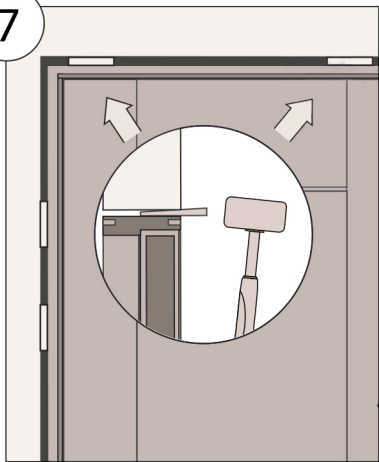

8

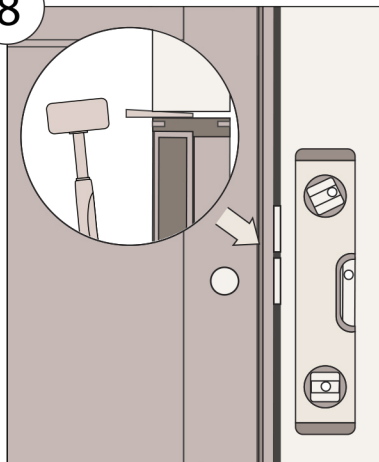

9

