

PRE-HUNG DOUBLE DOOR INSTALLATION INSTRUCTIONS



Step 1.

Carefully unpack the double door unit and inspect it for any shipping damage or defects.


Check the sizes, swing directions, and options printed on the door tags, located on the back side of each jamb, to ensure they match your order before proceeding.



Step 2.

Position the door unit into the rough opening, centering it within the frame. If using jamb extensions, ensure one side of the door frame is flush with the sheetrock then add extension to flush with the other side with the sheetrock. If using Exact Jamb Size as the wall without Extensions make sure to flush the jamb on both sides with the sheetrock.

KNOCKDOWN OPTION: If the door arrived knocked down, due to the oversized shipping size, you must assemble the door frame on the flat surface and after that mount door slabs on to the frame.

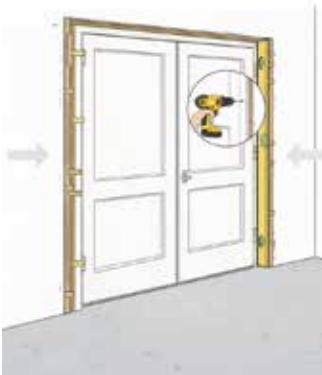

Step 3.

Secure the primary hinge-side frame to the wall stud/beam first. Ensure the frame is plumb (vertically straight). Use shims behind the frame as needed to adjust and maintain proper alignment before fully tightening screws.

Remove the rubber seal from the jamb (IF APPLIED) and install trim screws only through the frame into the stud. After all screws are tightened and the frame is secured, reinstall the rubber seal. If rubber seal is not applied please apply after installation. (OPTION B) Use a longer wood screw to secure the door through the hinge screw hole securing the hinge with the jamb directly to the frame.



Step 4.

Check the door operation. Open and close both doors to ensure smooth movement and even clearance between the doors and frame. Make sure all jambs and slabs are level on all sides.



Step 5.

Shim the secondary door jamb (the side opposite the main hinges). Place shims at the top, middle, and bottom to ensure the reveal (gap) is even along both doors and across the top.

Step 6.

Fasten the secondary jamb to the wall stud/beam. Re-check alignment as you secure it. Ensure the gap between both doors is even and that the astragal or meeting stile aligns properly.



Step 7.

Secure the head jamb (top of the frame). Make sure the spacing is even across both doors and that they meet evenly when closed.

Step 8.

Re-check the operation of both doors. Confirm that each door swings freely, latches properly (if applicable), and maintains consistent gaps all around. Adjust shims and screws if necessary.



Step 9.

Cut excess shims flush with the frame.

Step 10.

Apply low-expansion spray foam insulation between the door frame and wall studs/beam. Fill gaps evenly, but avoid overfilling to prevent bowing of the frame. Allow foam to cure fully before proceeding.



Step 11.

Cut casings/mouldings to size and insert them into the frame grooves to cover the gap between the frame and wall. Make straight cuts - do not cut at 45 degrees. Ensure all pieces are fully seated and aligned.

Step 12.

Install hardware such as magnetic catch or ball catch if applicable.

Step 13.

Apply caulking or sealant around the door trims as needed for a finished look.

Installation is complete.